BISSELL®

WE MEAN CLEAN

Earn BISSELL Rewards!
Register your product today!
See details on page 2

LITTLEgreen®

USER'S GUIDE
1400 SERIES

2 Thank You

2 Product Registration

3 Safety Instructions

4 Product View

4 Assembly

5-6 Operations

6 Maintenance and Care

7 Troubleshooting

7 Replacement Parts

8 Warranty

Thanks for buying a BISSELL Little Green

We're glad you purchased a BISSELL Little Green. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL Little Green is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL Little Green.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

Don't forget to register your product!

Registering is quick, easy and offers you benefits over the lifetime of your product. You'll receive:

BISSELL Rewards Points
Automatically earn points for discounts and free shipping on future purchases.

Faster Service
Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts
We'll contact you with any important product maintenance reminders and alerts.

Special Promotions
Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.bissell.com/registration now!

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

Read all instructions before using your Little Green®.

⚠ WARNING: To reduce the risk of fire, electric shock, or injury:

- Use only BISSELL cleaning products intended for use in this machine to prevent internal component damage. See the Cleaning fluid section of this guide.
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments.
- Do not expose to rain, store indoors.
- Do not handle Little Green® plug or appliance with wet hands.
- Do not leave Little Green® when it is plugged in.
- Do not put any object into appliance openings or use with blocked openings. Keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Keep appliance on a level surface.
- Be extra careful when cleaning stairs.
- Do not carry the appliance while in use.
- Never spray at people or animals.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not pick up hot or burning objects, such as cigarettes matches or hot ashes.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, gasoline, etc.).
- Do not use appliance in an enclosed space filled with vapors given off by oil based thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces.
- Do not use with damaged cord or plug.
- Turn off all controls before unplugging.
- Unplug from outlet when not in use and before conducting maintenance and troubleshooting.
- Do not use Little Green if it has been dropped, damaged, left outdoors or dropped into water. Have it repaired at an Authorized Service Center.
- Unplug by grasping the plug, not the cord. Do not unplug by pulling on cord.
- Always connect to a properly grounded outlet; see grounding instructions.
- Do not modify the 3-prong grounded plug.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

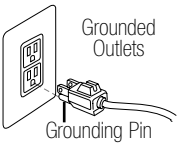

⚠ WARNING:

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. DO NOT MODIFY THE PLUG. If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the drawing above. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

This model is for household use only.

Product view

WARNING:
To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.

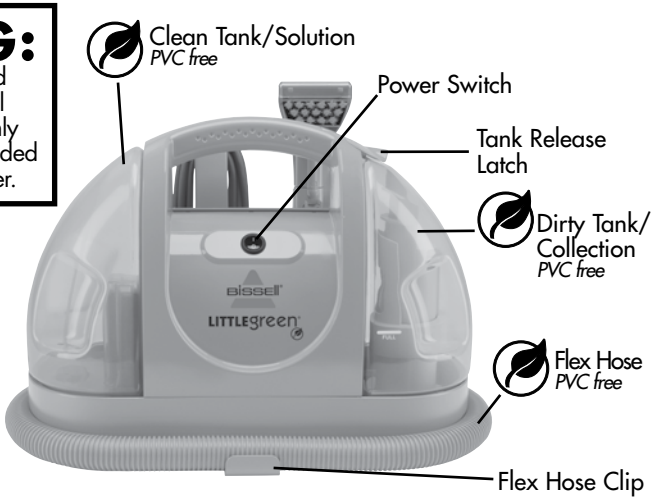

Cleaning fluid

Keep plenty of genuine BISSELL 2X formula on hand so you can clean whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and will void the warranty.

BISSELL 2X Little Green Portable Machine Formula for Carpet Spot & Stain Cleaning

BISSELL 2X Pet Stain & Odor Portable Machine Formula for Carpet Spot & Stain Cleaning

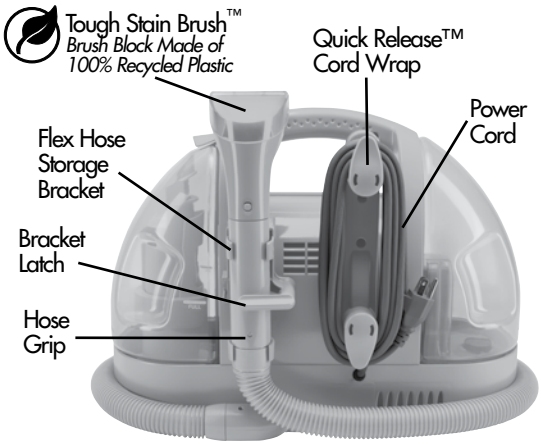

Assembly

Assembling your Little Green is a simple process. The only thing you will need to assemble your cleaner is a Phillips head screwdriver

1. Take the flex hose clip and slide the back plate into the opening on the front of the unit. You will hear a "snap" when it is locked in place.
2. Take the flex hose storage bracket and slide the lower plate into the opening on the back of unit. Make sure the screw holes line up.
3. Insert screw and tighten with a screwdriver.
4. Wrap flex hose around unit and place hose grip into bracket. Turn bracket latch counter clockwise to lock in place.

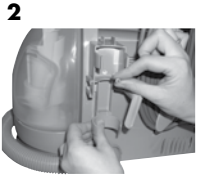

Operations

Getting ready

1. To fill the clean water/solution tank.

- **A.** Remove the tank by lifting it straight up and then away from the unit.
- **B.** Unscrew the black cap at the bottom of the clean water/solution tank and remove bottle insert.
- **C.** Measure 4oz. of formula (2 capfulls) and pour into tank. Fill the clean water/solution tank with hot (not boiling) tap water to the WATER fill line. Replace and tighten black cap. DO NOT BOIL OR MICROWAVE WATER.
- **D.** Replace the clean water/solution tank by lining up the vertical guides on the left side of the unit with the indentations on the clean water/solution tank and gently slide it down into position.

2. Release flex hose by twisting the bracket latch clockwise. Unwrap flex hose completely from around the unit.

3. Attach the tough stain brush tool to the spray trigger by inserting the tool onto spray trigger firmly until the button lock snaps into hole. Make certain the tool is securely attached.

4. Twist the Quick Release cord wrap clockwise to unwrap the power cord completely from onboard cord storage and plug into 120 Volt grounded outlet, as described in Important Safety Instructions, page 3.

5. Press and hold spray trigger—spray will start in a few seconds. Raise the tool slightly to check for spray.

Pre-treating

Cleaning effectiveness will be enhanced if you pre-treat heavily stained or highly-soiled areas. Here's how to do it:

1. Hold the cleaning tool just above the surface of the carpet or upholstery to be cleaned. Press the trigger to release a spray of cleaning solution directly onto the soiled area.

2. Wait 3-5 minutes before cleaning.

⚠ WARNING:

Do not use an extension cord with this product. The use of an extension cord may result in a severe electrical shock, particularly if the extension cord does not have an electrical rating higher than that of the product, OR if the extension cord does not have a three-prong grounding plug and if the extension cord is not plugged into a circuit box with a ground fault circuit interrupter. Safety precautions such as keeping all connections off the ground and dry will not eliminate the danger.

⚠ WARNING:

Use only a BISSELL 2X portable machine formula in your cleaner. Use of cleaning formulas which contain lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent-based soil removers also should not be used. These products may react with the plastic materials used in your cleaner, causing cracking or pitting.

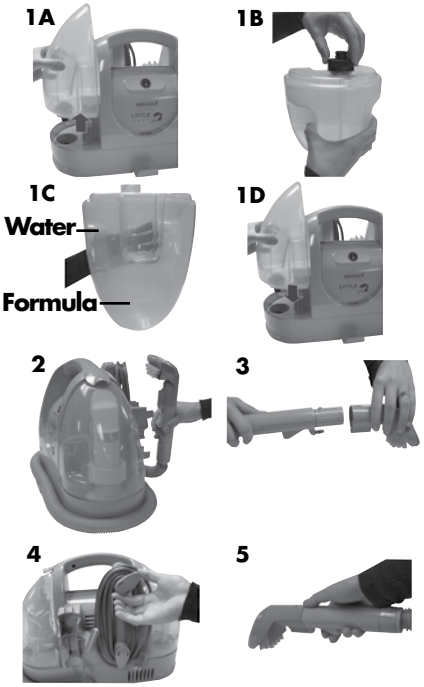

⚠ WARNING:

Do not use this product while on any type of ladder. Do not place the product in a place where it will be stepped on or kicked while in use. Do not place the product on an elevated surface where it may be pulled off the surface while in use.

Operations

Cleaning with your Little Green

1. Hold the tool approximately 1" above the soiled surface. Press the spray trigger to apply the cleaning solution to the soiled area.
2. Using the brush on the tool, gently scrub the area to be cleaned.
3. For thorough cleaning, spray additional solution while the brush and suction are in contact with the surface.
4. Apply downward pressure on the tool and pull it toward you. The suction will remove the dirt and cleaning solution. Continue until no more dirt can be removed.
5. As a final step, use "drying strokes" (by not pressing the spray trigger) to remove as much liquid/moisture as possible. Repeat this step as often as necessary.

IMPORTANT:
Check the manufacturer's tag before cleaning upholstery. "W" or "WS" on the tag means you can use your Little Green. If tag is coded with an "S" (with diagonal strike-through), or says "Dry Clean Only," do not proceed. If manufacturer's tag is missing or not coded, check with your furniture dealer.

Tip:
Deep cleaning stairs and high-traffic areas on a regular basis can prolong carpet life.

Tip:
Check upholstery stuffing before cleaning. Colored stuffing may bleed through the fabric when it becomes wet.

Maintenance and care

After cleaning

1. Unplug power cord from outlet.
   Note: If a significant amount of formula/water remains, it is all right to leave it in the clean water/solution tank for your next cleaning task.
2. Empty and rinse the dirty water/collection tank after each use, OR when dirty water reaches the indicated maximum fill line. To remove the tank, lift up the dirty water/collection tank release latch and remove the tank from the unit.
3. Disconnect the cleaning tool from the spray trigger by pushing down on button lock and pulling straight off.
   (Do NOT twist tool to remove it)
4. Once removed from the spray trigger, clean tool by rinsing under running water.
5. Check spray nozzle for accumulated dirt or debris. If necessary, clean with soft bristle brush.

Tip:
Before turning off the Little Green, suction up clean water to thoroughly rinse out the interior of the flex hose. Then, lift the cleaning tool and point it upwards to drain any remaining water into the dirty water/collection tank.

Machine storage

1. Wipe all surfaces with a soft cloth.
2. Wrap power cord around the cord wrap on the back of the Little Green.
3. Wrap flex hose around the base of the unit and secure the spray trigger.
4. Store unit in protected, dry area, at room temperature (40° to 110°F).

⚠ WARNING:
Keep spray away from face. Failure to do so may result in personal injury.

Troubleshooting

Reduced spray or no spray

Possible causes	Remedies
1. Spray nozzle clogged	1. Clean spray nozzle
2. Clean water/solution tank empty	2. Check/fill tank
3. Clean water/solution tank insert clogged	3. Clean insert at bottom of clean water/solution tank
4. Pump needs priming	4. Gently lift clean water/solution tank while depressing the spray trigger OR gently squeeze clean tank while depressing spray trigger

Deep cleaner won't pick up cleaning solution

Possible causes	Remedies
1. Tank release latch is not closed properly	1. Lift up the tank release latch and press down firmly to make sure it is in place
2. Poor upholstery/carpet tool position	2. Reposition upholstery/carpet tool on surface, follow recommended cleaning procedures
3. Dirty water/collection tank is full	3. Empty dirty water/collection tank
4. Upholstery/carpet tool brush worn	4. Replace with new brush
5. Excess solution in flex hose	5. Lift tool and point upwards to allow water in hose to flow into the dirty water/collection tank
6. Incorrect cleaning formula	6. Use BISSELL 2X compact formulas only

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Replacement parts - BISSELL Little Green®

Item	Part No.	Part Name
1	203-7151	Tough Stain Brush Tool
2	203-7158	Clean water/Solution Tank (includes cap and insert assembly)
3	203-7144	Dirty Water/Collection Tank (includes the airstack and float assembly)
4	203-7169	Quick Release Cord Wrap
5	203-7150	Vacuum Flex Hose Storage Bracket (includes screw for assembly)
6	203-7159	Vacuum Flex Hose Clip
7	203-5014	Bottle Cap & Insert Assembly
CLEANING FORMULAS		
8	79B9	2X Little Green® Formula 32 oz.
9	79B9-1	2X Little Green® Formula 16 oz.
10	74R7	2X Pet Odor & Stain Removal® Formula 32 oz.
11	74R7-1	2X Pet Odor & Stain Removal® Formula 16 oz.

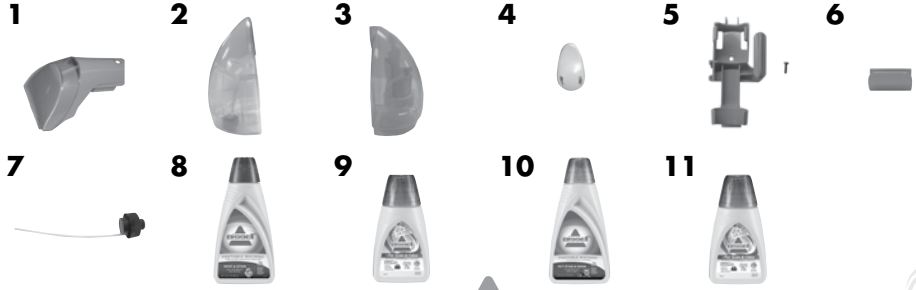

Warranty - BISSELL Little Green®

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited One Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

If your BISSELL product should require service:

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website or E-mail:
www.bissell.com

Or Call:
BISSELL Consumer Care
1-800-237-7691
Monday - Friday 8 am - 10 pm ET
Saturday 9 am - 8 pm ET

Or Write:
BISSELL Homecare, Inc.
PO Box 3606
Grand Rapids, MI 49501
ATTN: Consumer Care

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY**
THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

BISSELL®
WE MEAN CLEAN

©2012 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4434
Rev 4/12
Visit our website at:
www.bissell.com